

## **SVR-104/SVR-108/SVR-116 Firmware Upgrade Instructions**

### **Firmware Upgrade Instruction**

The firmware can be upgraded through web UI or USB. Before upgrading firmware, please backup configuration in advance.

#### ***A. Upgrade through Web UI***

1. Login into SVR
2. Go to "Setup" page and go to "System Options"->"Maintenance"
3. On "Upgrade SVR's Firmware" section, click "Browse" and select new firmware file
4. Press "Upgrade"
5. Upgrade message box will appear.
- 6. \*\*\* Warning \*\*\* Please wait until upgrade process finished, interrupt the upgrade process may cause system not work anymore**
7. After upgrade, the system will reboot automatically

#### ***B. Upgrade through USB***

1. Backup SVR configuration first (the system configuration may be cleared after upgrading firmware)
2. Prepare USB flash disk and format with FAT or FAT32 format
3. Copy "firmware.tar.gz" into USB flash disk
4. Plug USB flash disk into USB port on SVR
5. The Status LED on SVR will start to flash in amber. This indicates firmware upgrade is in process
- 6. \*\*\* Warning \*\*\* Please wait until upgrade process finished, interrupt the upgrade process may cause system not work anymore**
7. Wait until Status LED flash with green. This indicates firmware upgrade is finished
8. Power off SVR and turn it on
9. Restore configuration file back if needed