

MOBILE VIEWER MANUAL

Contents

| | |
|---|----------|
| Introduction..... | 3 |
| Summary..... | 3 |
| System Requirements | 3 |
| PDA install guide | 4 |
| Mobile_Viewer main display | 6 |
| MOBILE_VIEWER MAIN FUNCTION..... | 7 |
| DVR ADD LIST..... | 9 |

INTRODUCTION

SUMMARY

Mobile Viewer is used for remotely monitoring H.264 DVR under the WinCE Platform environment. Through the wireless Internet network (3G/GPRS/Wi-Fi), the mobile viewer can see the real-time image among channels and control the PTZ functions of camera.

SYSTEM REQUIREMENTS

| Items | Minimum Requirements |
|-------|----------------------|
| RAM | 128 MB or higher |
| O/S | WinCE 6.1 , 6.5 |

PDA INSTALL GUIDE

First of all, under the Windows OS, connects the PDA and PC via USB cable and executes the program ActiveSync program to copy the “Pocket_Viewer(0.2)(WM 6.X).CAB “ file into PDA.


1. Using ActiveSync for the connection of PDA and PC.



2. Copy the CAB file to PDA.



3. In file explorer of PDA, install the mobile viewer by clicking CAB file.

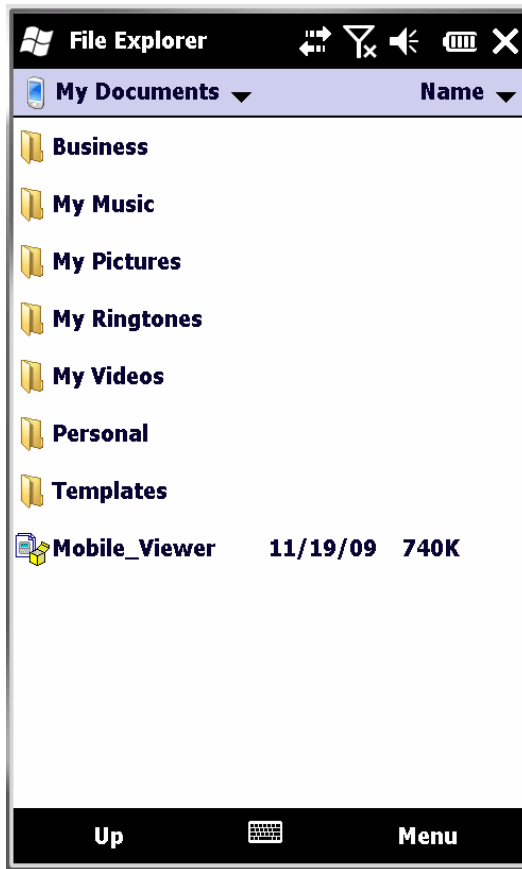

Installation directory: Program files\\Mobile_Viewer

 
MOBILE_VIEWER MAIN DISPLAY

When you run the Program, the main display is as shown below.



MOBILE_VIEWER MAIN FUNCTION

The following information will show all the function of the mobile viewer.



The DVR list added.



Connect the DVR.



Disconnect the DVR.



Modify the DVR list.



Control the PTZ function of direction.



Press the AUTO FOCUS button to enable the function of PTZ camera.



Select the channel.



Snapshot the current image and save the direction: Program files\Mobile_Viewer\Picture



ZOOM IN / FOCUS NEAR



ZOOM OUT / FOCUS FAR



AUDIO ON



AUDIO OFF



Microphone ON



Microphone OFF

DVR ADD LIST

Registering the DVR list, click the menu button.



Edit the DVR NAME, IP address, port and password and then press ADD to get a new connection.

Choose an exist link in the list and modify the content and then press UPDATE to change it.

| | |
|--|--|
| DVR LIST | <input type="text" value="NEW"/> |
| Connect Type | Static IP <input checked="" type="radio"/> MAC <input type="radio"/> |
| DVR NAME | <input type="text" value="NEW"/> |
| Static IP | <input type="text" value="192.168.0.1"/> |
| PORT | <input type="text" value="5400"/> |
| PASS | <input type="text"/> |
| MAC | <input type="text"/> |
| Server IP | <input type="text" value="192.168.0.1"/> |
| <input type="button" value="Add"/> <input type="button" value="Update"/> <input type="button" value="Delete"/> <input type="button" value="Cancel"/> | |

 Static IP: If IP address is fixed, then use it.

 MAC: for dynamic IP address.